


**Building
Advice
Bureau**



Part of The
CPM Group of companies

T: 01913 856600
M: 07758 223183
E: info@buildingadvicebureau.co.uk
W: www.buildingadvicebureau.co.uk

Flashings are used to weatherproof the junctions between a roof and the other parts of the building, which are usually at the abutments with walls and chimneys and where one roof meets another.

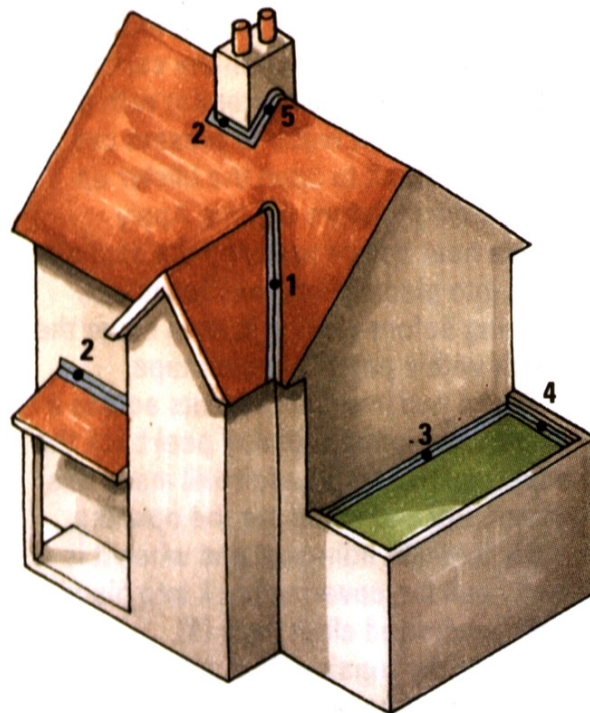

Where flashing is used

Typical types of flashing for pitched and flat roofs.

- 1 Valley
- 2 Apron
- 3 Wall abutment
- 4 Parapet abutment
- 5 Chimney abutment